

JAMEC PEM

TYRE INFLATOR ANALOGUE - TDR2000

MANUAL CALIBRATION PROCEDURE



PRODUCT NO.

10.2000

10.2000S

10.2000S5

10.2000S6

10.2000NA

10.2000SLY

10.2000SLY1

jamecpem.com

Facebook icon @jamecpem Instagram icon @jamecpem


TYRE INFLATOR

ANALOGUE - TDR2000

MANUAL CALIBRATION PROCEDURE

STEP 1

Remove these two screws.

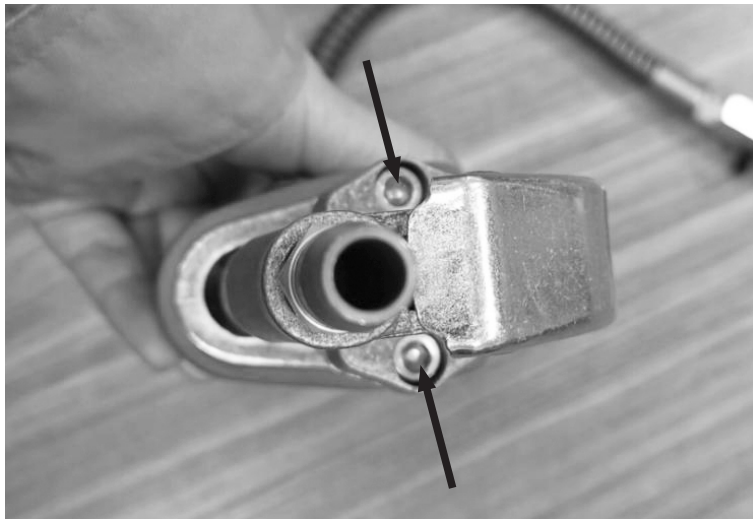

STEP 2

Separate shell and main body.



STEP 3

Loosen the two nuts with a spanner to adjust the scale back to zero.



STEP 4

The spring nut is used to adjust the scale back to zero by adjusting it up and down.



STEP 5

Check if it is aligned with the zero on the scale (see image below).

After adjustment, use a spanner to lock the two nuts in place.

After it is locked, reassemble the inflator in reverse of the previous steps (steps 2 & 1).

