

JAMEC PEM

HOW TO MANUALLY CALIBRATE AUTO1000 AUTOMATIC TYRE INFLATOR 11.0612




To begin ensure that the inflator is turned off and the screen is blank. To begin, hold down the "+" and "-" buttons at the same time



Whilst still holding down the "+" and "-" buttons also press the "on/off" button. The display will show one of the following codes: 05C, 05D, 05F, 060, 061, 062, 063, 064, 065, 066, 067, 068, 069, 06A, 06B, 06C.



Next press the "SET" button. The display then will show "CAL".

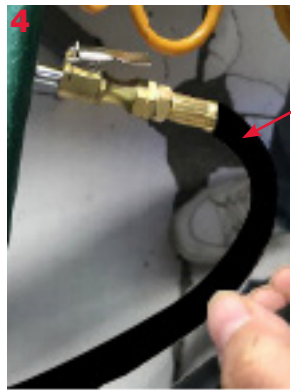

Connect the inflator chuck to a 7 BAR air supply. Note: this must be exactly 7 BAR



Press the "on/off" button to turn on the inflator. Numbers will appear on the display. Press "SET" once the numbers either: - No longer fluctuate - First two digits are fixed and the last two digits continue to fluctuate



Once set - the display will show 7.00BAR. The manual calibration of the inflator is now complete.

Disclaimer: The manual calibration is only available on models that were manufactured after Sept 2019