


HOW TO CALIBRATE TYRE INFLATOR DIGITAL GAUGE 11.0545

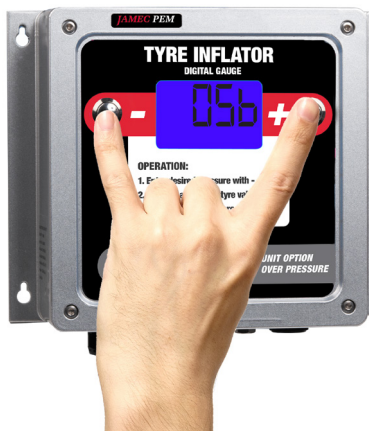

STEP 1

Turn off the inflator.

Press “-” & “+” buttons at the same time, then turn on the power, there should be an internal code shown on the screen.

Release the buttons.



STEP 2

When the internal code is stable/stopped moving, press “**UNIT OPTION OVER PRESSURE**” button to start the calibration mode.



STEP 3

Connect a stable air source with an air coupling, ensuring there are no air leaks. The stable air source must be exactly 7 BAR



STEP 4

When the internal code is stable/stopped moving press “**UNIT OPTION OVER PRESSURE**”, there will be a “7” shown on the screen. Turn off the power. Calibration is completed.