



TDR3000 QUICK FIX

BATTERY CHANGE


This inflator requires 2 x AAA batteries. If the voltage of the batteries fall below 2.6 volts, the battery icon will flash continuously until it shuts down. If the voltage of the batteries fall below 2.5 volts, the low "LO" battery icon appears while the power is on and then shuts down automatically. The batteries must be changed if the battery icon flashes.

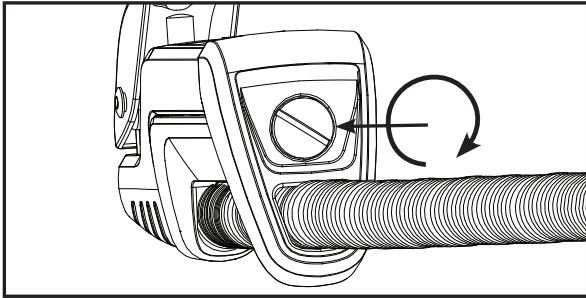

1. Unscrew the battery cap

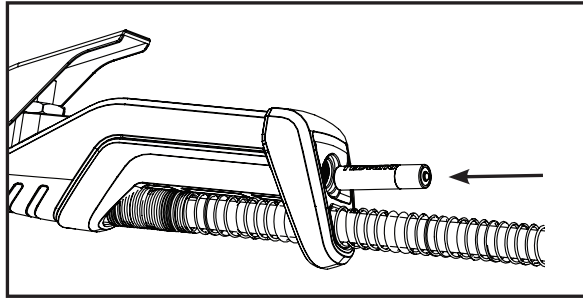


2. Slide the batteries into the inflator with the positive end facing out of the inflator

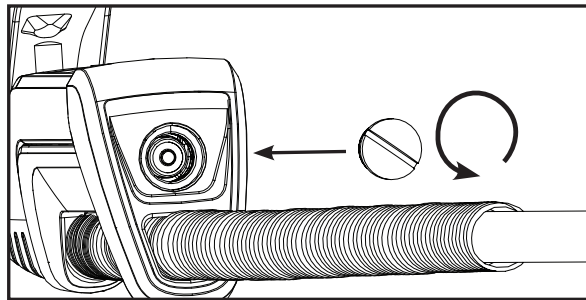

3. Replace the battery cap carefully and do not over tighten

IF THE INFLATOR WILL NOT TURN ON

Turn the battery cover $\frac{1}{4}$ - $\frac{1}{2}$ turn clockwise to re-engage the battery connectors. Do not turn any further to avoid over tightening and causing damage.

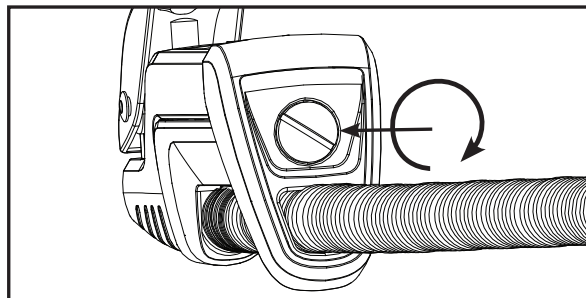

SCALE CHANGE

Press and hold the scale change button to activate the display, once the display is activated press and hold the button for 2 seconds to change the display scale.

